

Colour in and see your pictures come to life!


Information about the Magicolour colouring sheets:

- There are a total of 30 different colouring sheets to use with Magicolour.
- There are 20 standard colouring sheets you can use pencils, crayons or pens to colour these in.
 - 16 of these sheets are single paper sheets.
 - 4 of these sheets are 3-piece sheets. These can be combined in different ways to create vour own animations!
- Then there are 10 wipe-clean colouring sheets please use the wipe-clean pens supplied to colour these in.
 - 7 of these sheets are single paper sheets.
 - 3 of these sheets are 3-piece sheets. These can be combined in different ways to create your own animations!


• These sheets have a shiny, gloss finish and are marked 'WIPECLEAN' along the left and right side edge of each sheet.

• Each of the wipe-clean pens has a small sponge at the end of the pen lid, to wipe away the wipeclean pen colour from the wipe-clean sheet. (You can also use a dry cloth or tissue to



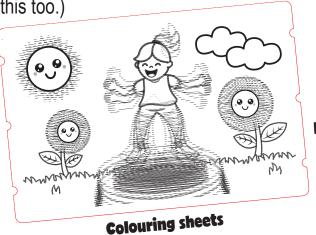


Wipe-clean sheets

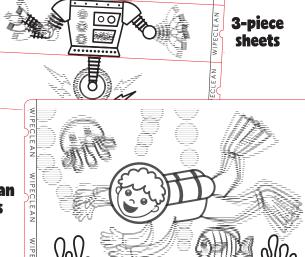


How to use Magicolour:


- 1. Colour in your Magicolour sheet.
- Lift up the screen by putting your finger in the groove at the centre of the bottom edge of the screen.

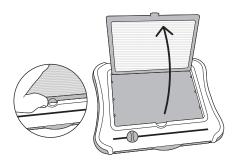


3. Slide the button to the right side then place the colouring sheet inside, lining it up with the 3 notches on each side of the inner part of Magicolour.

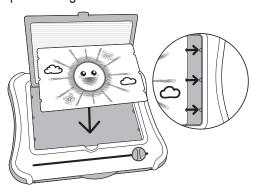


4. Close the screen so it snaps shut.

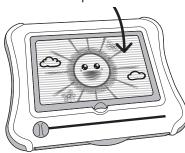

5. Slide the button from left to right to see the colouring sheet animate and come to life! Slide the button at a steady pace for the best results.

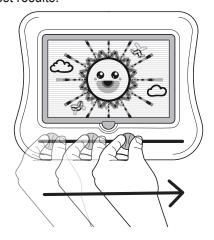


6. Use the 3-piece sheets to create your own unique mix and match animations! Line up each colouring sheet piece with the notches on each side of Magicolour's inner part.

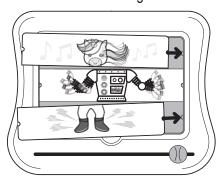


Extra points:

- On the underside of Magicolour, there are support stands which can angle Magicolour on a flat surface to show your animations.
- The stands open outwards and click into position.

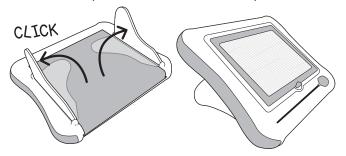


 There is a drawer underneath Magicolour to store your colouring sheets and wipe-clean pens!

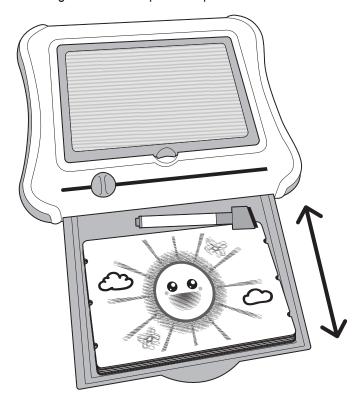

WARNING! Not suitable for children under 36 months. Choking hazard - contains small parts. Avoid skin contact with pen ink. Wash skin with soap and water to remove any incidental skin contact. Marker pens may stain, please protect clothes and the working area.

 Magicolour® is a registered trademark of John Adams Leisure Ltd. Patent Pending. Manufactured under license from Rufus Butler Seder, LLC and Nextoy, LLC © 2021 John Adams Leisure Ltd., John Adams Leisure Ltd., Hercules House, Pierson Road, Enterprise Campus, Alconbury Weald, Huntingdon, Cambridgeshire. PE28 4YA, England. EU authorised representative: John Adams Leisure EU Ltd., 1 Castlewood Avenue, Rathmines, Dublin 6, D06 H685, Ireland.





0_01_MAGICOLOUR_INS_PRT01 110321